



# STAR WHEELS



SW Ø 225 x 6 mm, AH 150F7  
Keyway 10 mm



SW Ø 200 x 6 mm, AH 125F7  
Keyway 10 mm



SW Ø 150 x 6 mm, AH 60F7  
Keyway 10 mm



SW Ø 100 x 6 mm, AH 22F7 or 19F7  
Keyway 6 mm



SW Ø 57 x 2 mm AH 3/8"



OD 70 x 12 mm, AH 60E8 Keyway 10 mm




SW Ø 180 used together with  
19 mm spacer

## COPPER

- SW Ø 245 x 6 mm, AH 70F7 Keyway 20 mm
- SW Ø 245 x 6 mm, AH 150F7 Keyway 10 mm
- SW Ø 225 x 6 mm, AH 150F7 Keyway 10 mm 9" x 1/4"
- SW Ø 200 x 6 mm, AH 125F7 Keyway 10 mm 8" x 1/4"
- SW Ø 180 x 6 mm, AH 125F7 Keyway 10 mm 7 1/4" x 1/4"
- SW Ø 150 x 6 mm, AH 60F7 Keyway 10 mm 6" x 1/4"
- SW Ø 120 x 6 mm, AH 22F7, Keyway 6 mm 4 3/4" x 1/4"
- SW Ø 110 x 6 mm, AH 22F7 or 19F7 Keyway 6 mm 4 3/8" x 1/4"
- SW Spacer, OD 166 x 25 mm, AH 150E8 Keyway 10 mm
- SW Spacer, OD 166 x 18 mm, AH 150E8 Keyway 10 mm
- SW Spacer, OD 138 x 19 mm, AH 125E8 Keyway 10 mm
- SW Spacer, OD 90 x 21 mm, AH 70E8 Keyway 20 mm
- SW Spacer, OD 70 x 12 mm, AH 60E8 Keyway 10 mm
- SW Spacer, OD 32 mm, AH 22E8 or 19F7 Keyway 6 mm

- Art. No: 132139-xx
- Art. No: 132141-xx
- Art. No: 132125-xx
- Art. No: 132124-xx
- Art. No: 132126-xx
- Art. No: 132122-xx
- Art. No: 132128-xx
- Art. No: 132123-xx
- Art. No: 132142
- Art. No: 132135
- Art. No: 132138
- Art. No: 132140
- Art. No: 132136
- Art. No: 132137

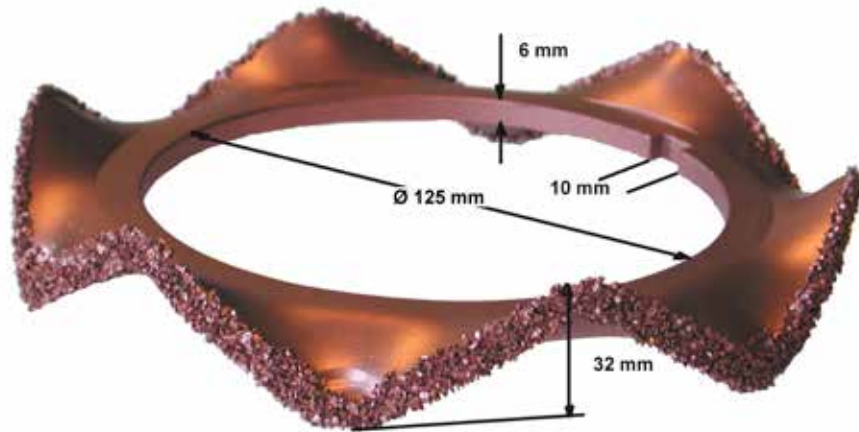

Copper Carbide Design



Example of Application

INSIST ON THE ORIGINAL!

WWW.BJ-ROCKET.COM